


Assembling The **COMPANY B** Bulldozer



1. Glue the engine block into the engine compartment. Use the guide tab on the rear of the engine block for location. Make sure the block seats low enough for the hood to properly seat.



2. Glue on the hood. In order to take advantage of the full detail of the engine block you may want to pass this step and glue the hood on after painting.

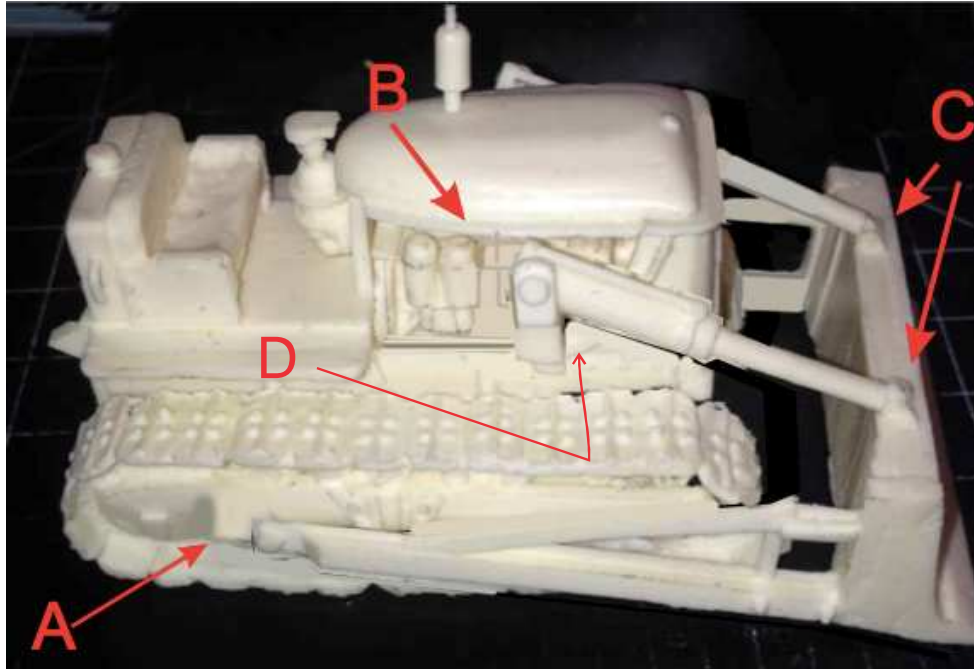

3. Glue the piston supports in place D. flush with the front cowling edge. Make sure the supports are parallel to the bulldozer body.
4. Place the model on a flat surface. Use Bluetack or a rubber band to hold in place the rear of the blade rail on the track bar at A.
5. Position the blade so the hydraulic pistons properly locate at B and C with the blade flat on the surface. Glue the pistons in place.
5. When the pistons have set remove the Bluetack and glue the rear end of the blade rail in place at A.

